

CABRIO CONVERSION AND STOWAWAY QUICK CONNECT INSTRUCTIONS

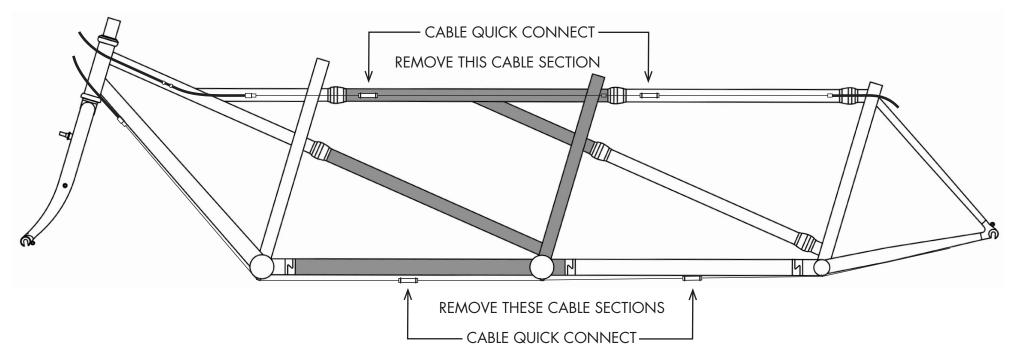

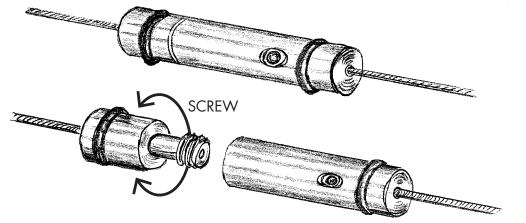

Quick Connects are individually labeled.

Cables on the rear section cross.

Remove shaded frame section to convert to tandem.

